





Instructions for configuring the Zspire Bluetooth Mouse using Macintosh OS X 10.4.6

These instructions should work on any Bluetooth-able

1. Make sure that your adapter has been installed following the manufacturer's instructions (this should not be necessary for Apple Bluetooth adapters that are built into the computer, as they are installed as part of the operating system installation). The Zspire Bluetooth Mouse requires a Bluetooth hardware adaptor to work.
2. First, confirm your system settings. Select System Settings from the Apple menu, then in the Hardware area, click on Bluetooth. You may choose not to use all of these options, but we recommend that you select the Bluetooth status in the menu bar.

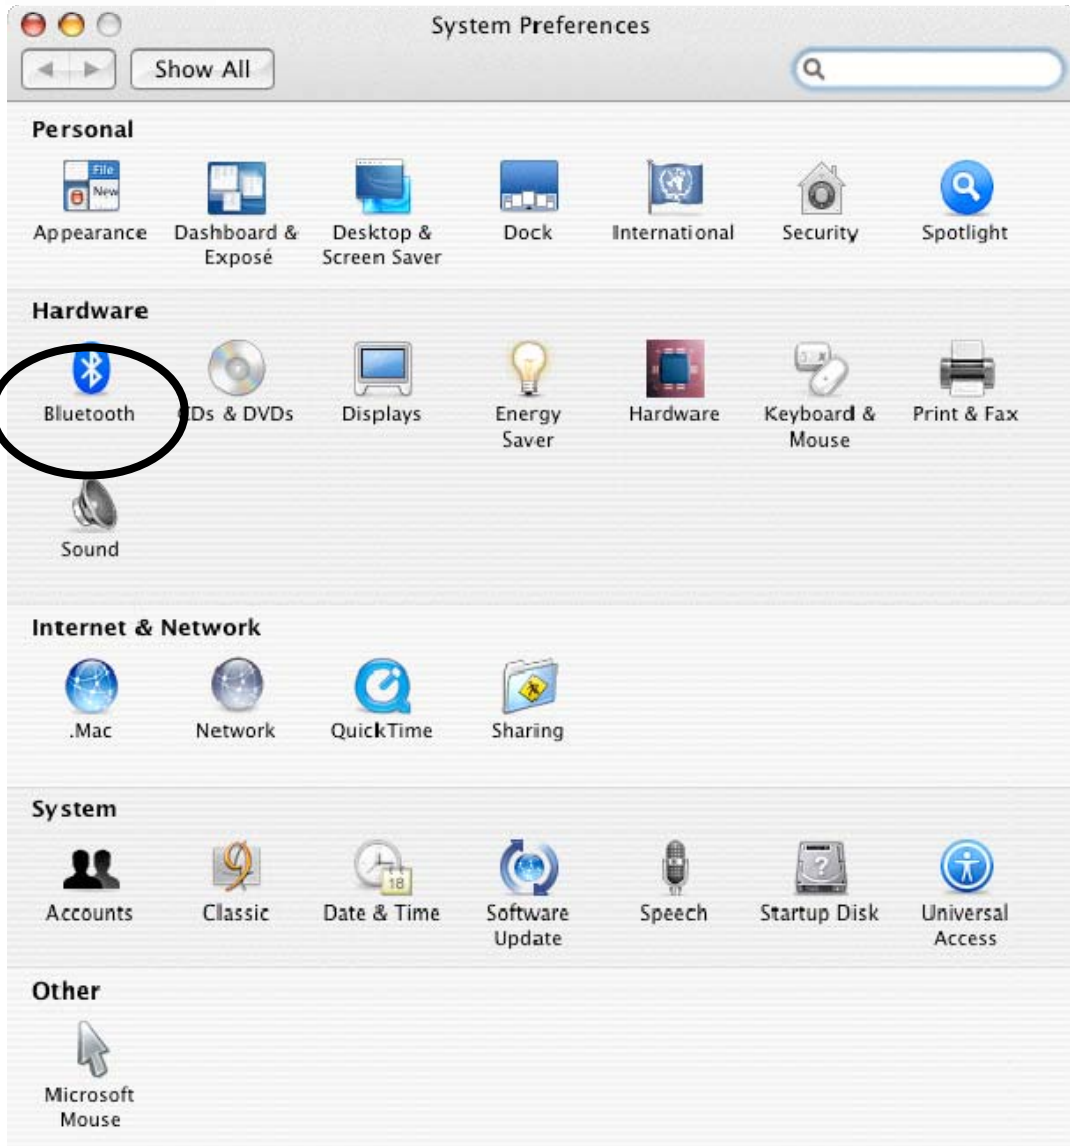

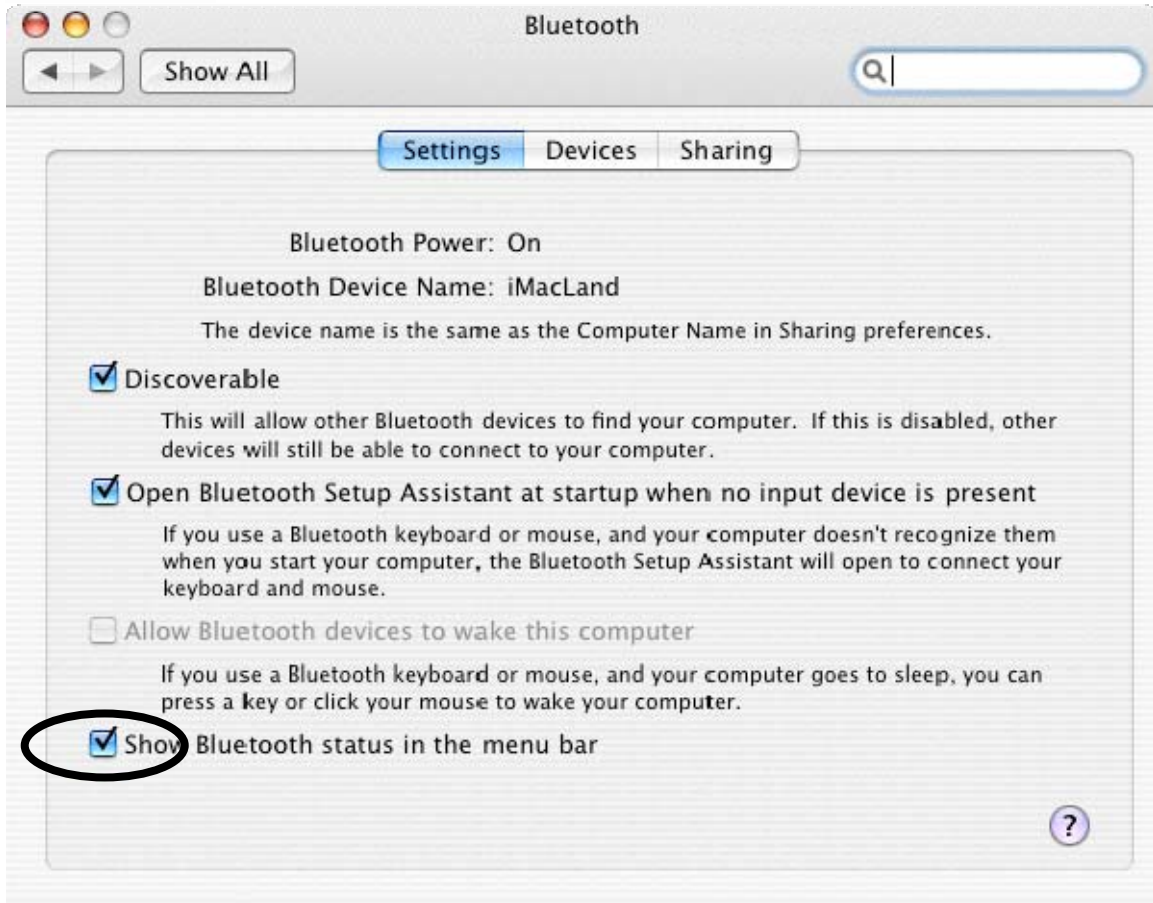

3. Next, select the Bluetooth icon from the menu bar and select "Set up Bluetooth Device". If you did not select to put the status in the menu bar, then select the "Bluetooth Setup Assistant" in the Applications/Utilities Folder.




4. Press "Continue"



5. Select "Mouse". On the bottom of the Zspire Mouse, press (with a sharp thin object, like a paper clip) the "discoverable" button and press "Continue"




6. You should see a mouse appear as “Winpower001”. Select this device and press “Continue”. It’s OK to continue while it still says “Searching for mice”

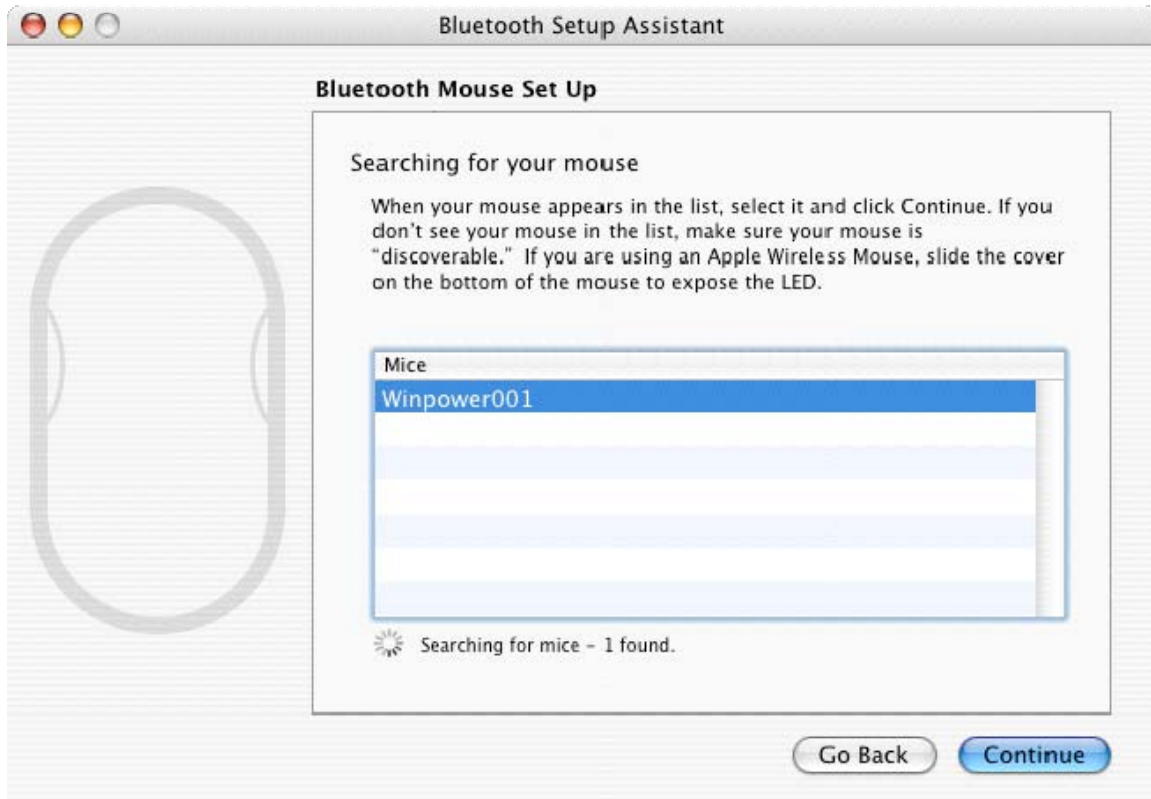



7. You will then see the following screen (with information regarding pairing without a key)

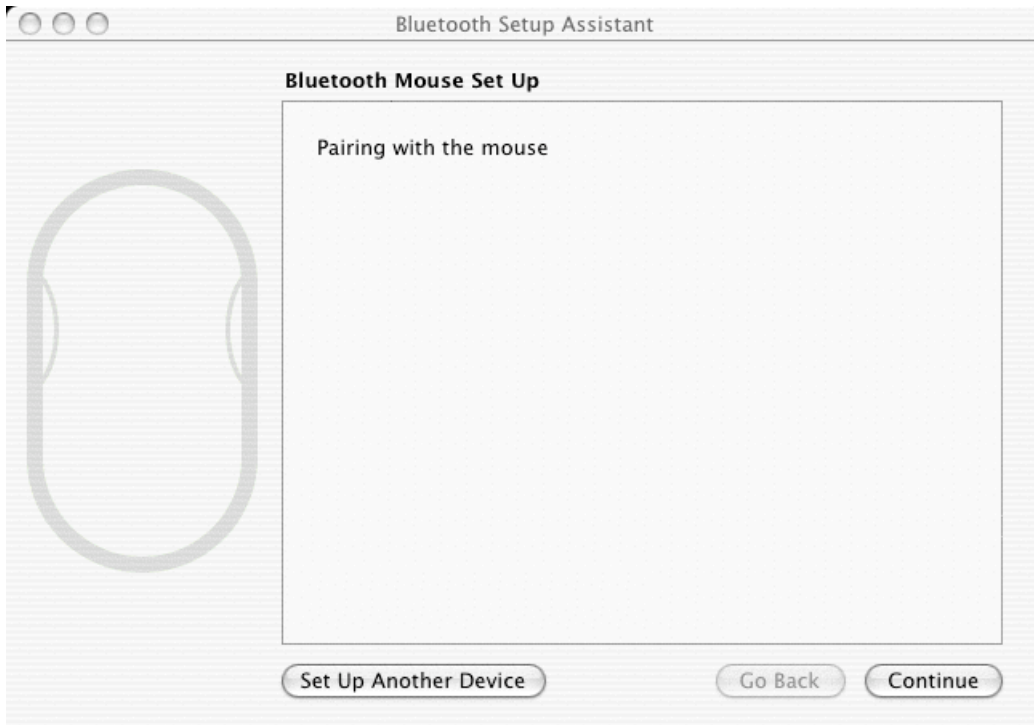



8. When complete, you will see the following screen. Press the Quit key to continue. Your Zspire mouse should now be able to work with your Mac.

